



110*130mm 装骑马钉


Smart Aroma Diffuser

User Manual

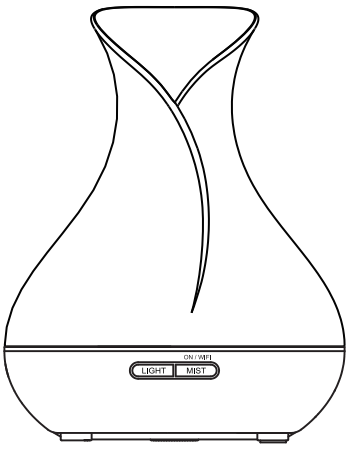

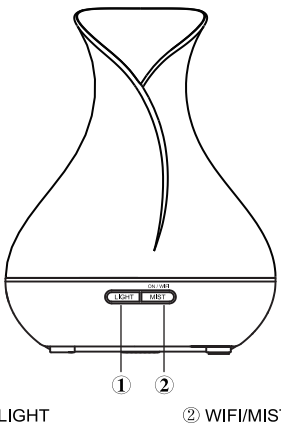

① LIGHT ② WIFIMIST

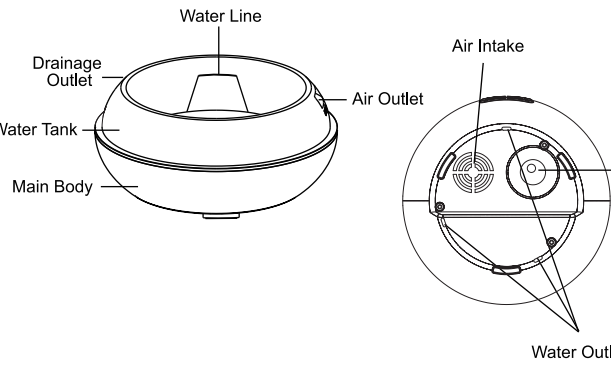

Diffuser Operation

- Position the Aroma Diffuser upright, pull vertically upwards to remove cover. (Fig. 1)
- Connect AC adaptor power cord into the DC input jack at the base of the Aroma Diffuser. It is suggested to route cable via track provided. (Fig. 2)
- Pour water and essential oil into Aroma Diffuser. DO NOT fill in excess of MAX marking 400ml. DO NOT use boiling water. DO NOT fill when power is on. It is recommended to add 2-3 drops of essential oil for each 100ml of water. (Fig. 3)
- Re-install cover. Spout is adjustable to guide aroma into desired direction. Aroma Diffuser must NOT be operated without the cover. (Fig. 4)
- Plug diffuser into power outlet. (Fig. 4)
- "LIGHT" button—colorful light function: (Fig. 5)
 - Press "LIGHT" turn on LED light. Light color cycles automatically.
 - Pressing the light button again will lock it to the first color.Keep pressing to cycle through colors.Brightness is adjustable through the cycle until it is off. (Bright->Dim->Off)(Press once,beep once).
 - To turn off the light, press and hold down "LIGHT" button for 1.5 seconds.(Two beeps)
- "MIST"(WIFI pairing button): (Fig. 6)
 - Mist level is adjustable by pressing "MIST" for different times. Press once, low mist. Press twice, high mist.
 - WIFI pairing function: Press and hold down "MIST" button.WIFI connection mode is on. After two beeps,the "NET_LED" indicator light flashes at a regular way-two times fast,one time slow which shows the diffuser is into WIFI pairing mode.
- Matching function: (Fig. 6)
 - long press the fog key to enter the WIFI module connection mode. After the buzzer BEEP two, wait for the NET_LED indicator light two fast and slow to have a regular flicker, then enter the WIFI matching mode.
 - It is recommended to drain water from tank and keep dry for extended idle period.
 - When connect with power,the original state of aroma diffuser is still off.
 - Missing operation and light will switch off automatically when there is insufficient water, even press "MIST", aroma diffuser is also switch off automatic.


Attention

- The amount and intensity of mist produced will vary, but this is not unusual and should not be considered as a fault.
- Factors that affect this include water type, humidity, temperature, air currents.
- Auto power off when water runs out.
- Applies only 100% natural essential oil, if they contain chemical ingredients, flavors or impurities may cause damage to the product.
- Before replacing another essential oil, follow the maintenance part to clean the product.

Accidental Leakage

In the event of the unit being knocked over or tipped during use, please follow the steps as below to avoid malfunction:

- Unplug the unit and remove cover.
- Pour out any remaining water from the water tank.
- Shake the unit gently to drain water, and then keep it natural air drying for at least 24 hours.

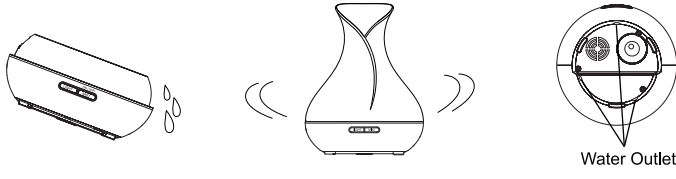


Maintenance

After using 5-6 times, or 3-5 days, please clean the product as follow:

- Unplug the unit and remove cover.
- Pour out any remaining water from the tank.
- Add a small amount of warm kitchen detergent to clean, use swab to wipe it gently, and then use cleaning cloth to dry it lightly.
- Refer to the following pictures, to avoid water flow into the air outlet, pour off water aside by the left picture, not the right one.
- Do not use other acids or enzymes detergent, as this may give off poisonous gas or cause malfunction.

Note: Be sure to use a mild detergent.

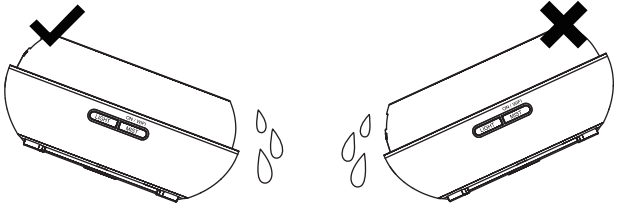

Precautions

- It is not allow to change, dismantle, or repair the unit. If you are not the technician. Please contact the selling department to repair if necessary.
- Do not switch on power when the tank is empty.
- Do not touch the atomization piece.
- Clean regularly as per Maintenance instructions to avoid malfunction.
- Always unplug before maintenance.
- For hygiene reasons, after use, pour away remaining water from "DRAINAGE SIDE" of tank, and wipe with a clean dry cloth.
- Essential oil can corrode in the event of spillage of contact, please wipe away with a soft cloth.
- Only use the measuring cup to add water into the tank, do not fill water directly from the water pipe.
- Do not let mist directly to the furniture, clothing, walls etc.
- Keep away from direct sunshine heat sources and air conditioners or fans.
- Always keep on stable flat surface do not put on carpet, duvet or unstable area.
- Keep away from electronic equipment, such as TV and Audio equipment.
- Wait 60 minutes before restart to avoid damage atomization piece.
- Don't use sparkling water, tap water and mineral water are available.
- Never move product when it is working.
- Do not touch any part of the product with wet hands.
- Keep away from the child and pet, child is not allow to play without supervisor. This product is not suitable for the child and people who don't know the product and have no experience.
- If the cable is smoking, burning, unplug immediately.

Troubleshooting

Please refer to the table below in the event of the product operating abnormally:


If product doesn't work well, please refer to the following points before requesting repairs:	
Will not switch on or switch off	<ul style="list-style-type: none">Is there enough water in the tank? —Please add water to the tankIs the power cord connected properly? —Please disconnect, check cables and re-connect carefully.
No mist or abnormal mist	<ul style="list-style-type: none">Not enough water? or too much water? —Please add suitable amount of water in the tank, water must never be filled over 400ML (MAX)line.Dirt on the atomization piece? —Please refer to maintenance instructions remove and re-install correctly, so mist can be released freely.Cover and inner cover are not installed properly? Dirt on the air suction port on the underside of the base? —If too much dust in the air suction port, the mist will be restricted to come out. Just clean it.
Water leakage from product	<ul style="list-style-type: none">Cover and inner are not installed properly? —Remove and reinstall correctly, so mist can be released freely.Low temperature or high humidity? —Under these conditions, the mist may condense quickly into water droplets.

Specifications

Dimensions	Approx 168.5 x 215MM
Weight(excluding adaptor)	Approx 488g
Power: Input/Output	AC100-240V 50/60Hz DC24V 650mA
Length of cord	Approx 170CM
Power	Approx 14W
Tank Capacity	400ML
LED light	3pcs
Material	PPI/ABS
Accessory	AC Adapter and manual
Working frequency	2.4MHz

APP & Diffuser Pairing

Download eWeLink from App Store or Google Play. This specification is applicable to phones that support eWeLink.



Sign Up

- Set Country Code.
- Enter your phone numbers or email address.
- The password length must be greater than or equal to 8 bits.
- Receive SMS verification code from your phone. If your phone failed to receive a verification code, you can use other mobile phone (no need to change the phone card) for registration.

*Please restart APP if any issues happened when registering.

Add Device

- Pairing mode. Refer to Wi-Fi Connection explanation above.
- Click icon below in APP:
- Confirm to be pairing, then click Next.
- Enter your home Wi-Fi name and password:

Note:

- Device name must be letters or numbers, or it cannot be found.
- If your home Wi-Fi does not require a password, leave it blank.
- The device only supports 2.4GHz networks.

5. Name the device then done. If the device is not online, just wait one or two minutes and the device is trying to connect to the cloud server through your wireless router.

APP Quick Guide

1. Share Function:
Device can be shared by primary account. All sharing members can control the device.
Note:

- The Shared account must be a registered eWeLink account.
- Please open eWeLink app and keep online when sharing device.
- You can authorize shared account the timer function: Add, Edit, Delete, Enable/Disable

2. Timer:
The device can set up to 8 timers.
3 Modes of timers: Once, Repeat, Delay Timers can work when offline but the device should be on.

3. Scene:
Two kinds of scenes: common scene and smart scene.
Common scene:
One touch to turn on/off all devices of the same scene.
Smart scene:
when temperature or humidity meets requirement, device will be turned on/off. (smart scene cannot support diffuser)

4. Device Security Protection:
One device can only be added with one primary account. Only after primary account deletes or shares the device, others can add the device.

5. Language:
APP will automatically identify the user's mobile phone system language and display the corresponding language. You can also manually switch between Chinese and English versions in app.

6. Device information and user center:
System will automatically remind you to upgrade if any new version, please upgrade in time. Any questions can be submitted in the user center feedback, thank you!

APP FAQs


- Router can not access the Internet, dose it support the local area network?
Can it directly connect to cellphones hot spots?
Answer: The Android version supports LAN control, while Apple version currently not. The device must be connected to the Internet via a router to communicate with the mobile server.
- Why can not I get a registered SMS verification code? Why can not mobile phone connect device hotspot?
Answer: Permission is limited. Select "Allow" when you encounter authorization during installation.
- Why does app display offline after adding devices?
Answer: Once the device has just been added, it takes a minute or two to connect network. If it is offline for a long time, please judge from the green indicator light:
Indication light blinks once and off 2 seconds:
The device didn't connect to your router.
•Poor internet connection. Check your network connectivity and put device closer to router.
•Delete the device and re-add it.
•Make sure to use 2.4GHz Wi-Fi router.
•Make sure that router background center does not use MAC address filtering.
Indication light blinks once and off 1 second:
The device is connected to the router and server, but is not properly added to the user account.
•Please re-plug the device and wait a minute.
•If still not working, please delete the device and re-add it.
Indication light blinks twice and off 2 seconds:
The device is connected to the router but not the server.
•Please make sure your router can work.
Indication light stays on: You can control now.
Still have app questions?
Please don't hesitate to submit a feedback on the app.
We will get back to you as soon as possible within the working day.
Any other product issues?
Please feel free to contact seller support@asakuki.com.
Thanks for your support!

Amazon Echo Connection & Operational Order


Compatible with Amazon Echo

- Download and install Alexa app.
- Register an Alexa account and pair your Echo.
- Add eWeLink smart home fan skill.


A. Click menu at the upper left corner.

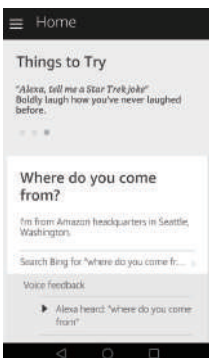


B. Click Skills to enter skill store.

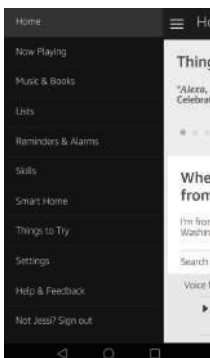


C. Search eWeLink skill.

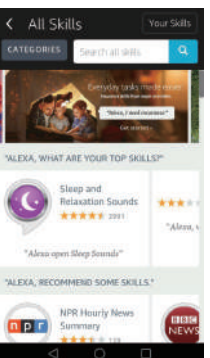


D. Click eWeLink Smart Home Fan to enable the skill.

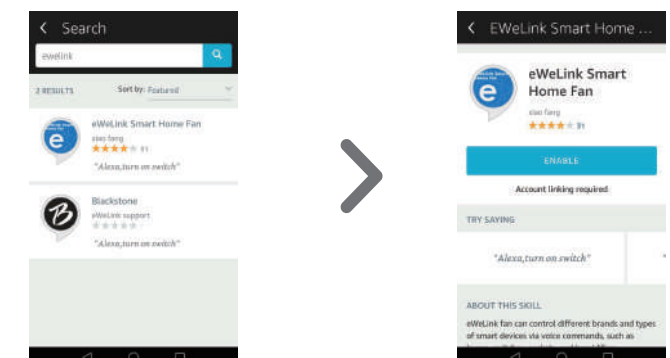


E. Enter your eWeLink account and sign in.

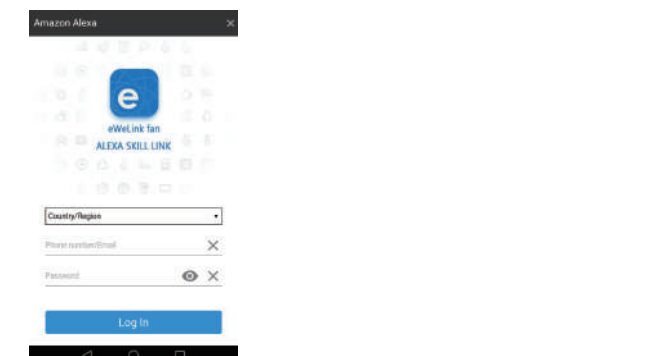


F. Turn off the page after binding successfully.

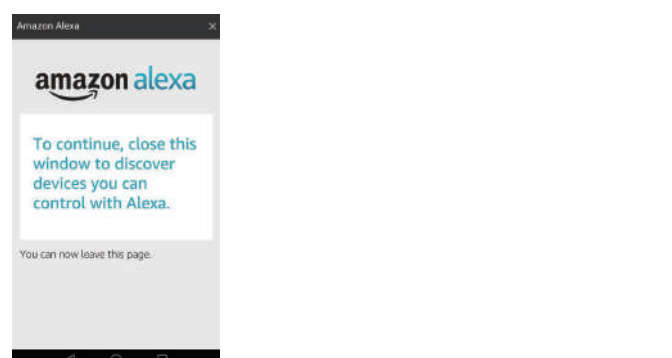

G. Click DISCOVER DEVICES or click Smart Home on menu to discover devices.

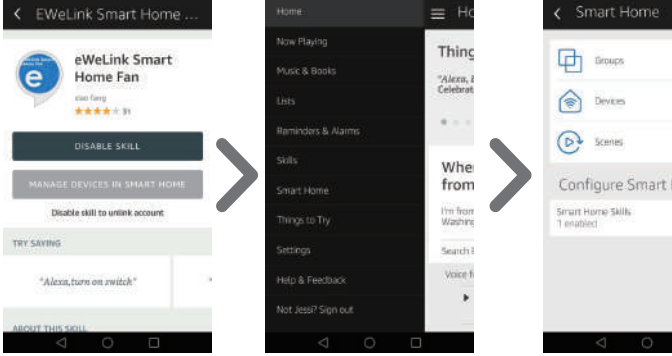

H. Control the devices that searched. Red mark is the device name.

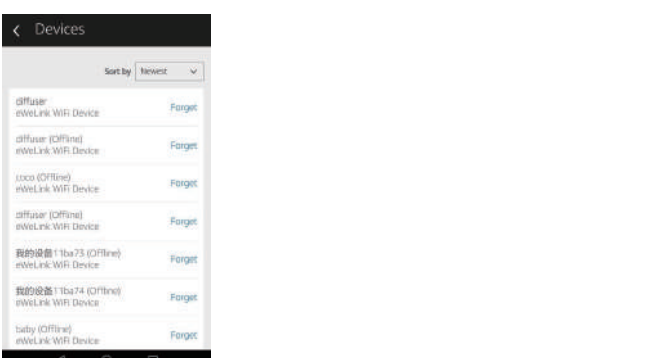

After completing, enjoy your smart home journey.
Or, you can search devices by the following orderings:
Alexa, discover my smart home devices
Alexa, discover device
Alexa find device

After 20 seconds, echo will tell you how many devices it found.
Sign in Alexa app and click Smart Home to control the devices it found.

Operational Orderings

Note: Make sure device name is English and don't use special characters that device cannot recognize.
Such as: My lamp, Switch, My switch, etc..

2.1 Searching Devices.
"Alexa, discover my smart home devices"

2.2 Device On/Off Orderings:
"Alexa, turn on diffuser"
"Alexa, turn off diffuser"

2.3 Color Setting
"Alexa, turn diffuser to red (blue, green, yellow, purple, white)"

Available colors:
red, white, green, yellow, blue, purple, orange

2.4 Percentage Setting — LED Brightness Adjustment
"Alexa, set diffuser to 10 (20, 30, 40, 50, ...) percent"